

Trinitron® Color TV

Operating Instructions

KV-32S42 KV-32V42 KV-35S42 KV-35V42
KV-32S66 KV-35S66

© 1999 by Sony Corporation

Remote Control

Keep this flap unfolded and use this page for reference.



SYSTEM OFF
(page 14)

TV/VTR (page 14)

ANT (pages 3 and 14)

PICTURE MODE
(pages 13 and 18)

SLEEP (page 13)


JUMP (page 13)

TV/SAT
(page 14)

RESET (page 13)

VOL + / -

CODE SET
(pages 28-30)

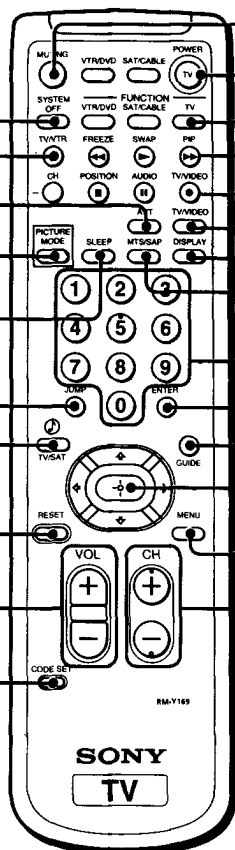

MUTING

TV (POWER)

TV (FUNCTION)

PIP (page 15)

TV / VIDEO (page 14)

DISPLAY (page 14)

MTS/SAP
(pages 14 and 19)

0 - 9 buttons

ENTER

GUIDE (page 14)

Select buttons
(pages 11 and 16)

MENU

CH + / -

Getting to know the buttons on the remote control

Names of the buttons on the remote control are in different colors to represent the available functions.

Button color

Clear Indicates which equipment is currently being controlled
Green Buttons relevant to power operations

Label color

White TV/VTR (VCR)/DVD/SAT/CABLE operation buttons
Yellow PIP operation buttons
Blue SAT operation buttons
Green SYSTEM OFF operation button

All references to buttons on the remote control will be highlighted with **bold text**.

WARNING

To reduce the risk of fire or shock hazard, do not expose the TV to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OR PLUG TO WIDE SLOT, FULLY INSERT.

CAUTION

When using TV games, computers, and similar products with your TV, keep the brightness and picture contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or picture contrast setting, the image can be permanently imprinted onto the screen. Continuously watching the same program can cause the imprint of station logos onto the TV screen. These types of imprints are not covered by your warranty because they are the result of misuse.

Note on Caption Vision

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

Note on cleaning the TV

Clean the TV with a soft dry cloth. Never use strong solvents such as thinner or benzene, which might damage the finish of the cabinet.

Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Use of this television receiver for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster/cable company and/or program owner.

NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennas.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This document is for the remote control RM-Y168, 169.

MODELS: KV-32S42, 32S66, 32V42, 35S42, 35S66, 35V42



As an ENERGY STAR® Partner, Sony has determined that this product or product models meets the ENERGY STAR® guidelines for energy efficiency.





ENERGY STAR® is a U.S. registered mark.

Owners Record

The model and serial numbers are located on the front of this instruction manual and the rear panel of the TV.

Model Number _____
Serial Number _____

  Table of Contents

Important Safeguards	i	Basic Set Up		Operating Video Equipment	
Welcome!	1	Inserting batteries	11	Programming the remote	28
Precautions	1	Using the remote control move & select buttons	11	Operating a Cable Box or Satellite Receiver	
Using This Manual	1	Front panel menu control	11	Programming the remote control	30
Connecting and Installing the TV		Using Your New TV		Troubleshooting	31
Making Connections	2	Setting up the TV automatically	12	Specifications	32
Note about the AC Power Cord	3	Watching the TV	13	Index	34
Cable or Antenna Connections	3	Using Picture-in-Picture — PIP	15		
Cable Box Connections	4	Using Your Menus			
VCR Connections	5	Learning menu selection	16		
Satellite Receiver Connections	7	Quick start to the menus	17		
DVD Player Connections	8	Using the VIDEO  menu	18		
Additional Connections	9	Using the AUDIO  menu	19		
Using Special Sony Features	10	Using the TIMER  menu	20		
		Using the SET UP  menu	21		
		Using the CHANNEL SET UP menu ...	23		
		Using the PARENTAL CONTROL menu	26		

Important Safeguards

For your protection, please read these instructions completely, and keep this manual for future reference.

Carefully observe and comply with all warnings, cautions and instructions placed on the set, or described in the operating instructions or service manual.

WARNING

To guard against injury, the following basic safety precautions should be observed in the installation, use, and servicing of the set.

Use

Power Sources

This set should be operated only from the type of power source indicated on the serial/model plate. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, refer to the operating instructions.

Grounding or Polarization

This set is equipped with a polarized AC power cord plug (a plug having one blade wider than the other), or with a three-wire grounding type plug (a plug having a third pin for grounding).

Follow the instructions below:

For the set with a polarized AC power cord plug

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.



Alternate Warning

For the set with a three-wire grounding type AC plug

This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the grounding plug.

Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

Always turn the set off when it is not to be used. When the set is left unattended and unused for long periods of time, unplug it from the wall outlet as a precaution against the possibility of an internal malfunction that could create a fire hazard.

Object and Liquid Entry

 
 
Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.

Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set. If a snapping or popping sound from a TV set is continuous or frequent



while the TV is operating, unplug the TV and consult your dealer or service technician. It is normal for some TV sets to make occasional snapping or popping sounds, particularly when being turned on or off.

Installation

Water and Moisture

Do not use power-line operated sets near water — for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

Accessories

Do not place the set on an unstable cart, stand, table or shelf. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart or stand recommended by the manufacturer for the specific model of TV. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

Ventilation

The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.
- Never block the slots and openings by placing the set on a bed, sofa, rug or other similar surface.



Important Safeguards (continued)

- Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.
- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.

Power-Cord Protection

Do not allow anything to rest on or roll over the power cord, and do not place the set where the power cord is subject to wear or abuse.

Antennas

 
Outdoor Antenna Grounding

If an outdoor antenna is installed, follow the precautions below.


An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.

WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code (NEC) in USA and Section 54 of the Canadian Electrical Code in Canada provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.



Antenna Grounding According to the NEC
Refer to section 54-300 of Canadian Electrical Code for Antenna Grounding.

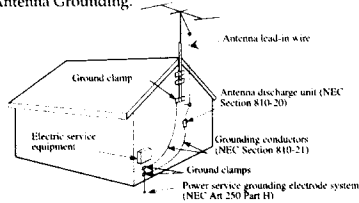

NEC: National Electrical Code

Lightning

 
For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power-line surges.

Service

Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled into the set.
- If the set has been exposed to rain or water.



- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.
- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.

- When the set exhibits a distinct change in performance — this indicates a need for service.

Servicing

Do not attempt to service the set yourself since opening the cabinet may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Replacement Parts

When replacement parts are required, be sure the service technician certifies in writing that he has used replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.

Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition, and to so certify. When the set reaches the end of its useful life, improper disposal could result in a picture tube implosion. Ask a qualified service technician to dispose of the set.



Welcome!

Thank you for purchasing the Sony Trinitron® Color TV. Before reading, check the model number located on the front of this manual.

The menus and illustrations used in these instructions are for KV-35S66. Differences in operation or features will be indicated in the text, for example, "KV-35S66 only."

Model Number	PICTURE IN PICTURE (PIP)	SRS	SURROUND	AUTO VOLUME CONTROL
KV-32S42			•	
KV-32S66	•		•	
KV-32V42		•		•
KV-35S42			•	
KV-35S66	•		•	
KV-35V42		•		•

Precautions

Safety

- Operate the TV only with 120 V AC.
- The plug is designed, for safety purposes, to fit in the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- If any liquid or solid object should fall inside the cabinet, unplug the TV immediately and have it checked by qualified personnel before operating it further.

Installing

- To prevent internal heat build-up, do not block the ventilation openings.
- Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.
- The AC power cord is attached to the rear of the TV with hooks. Do not attempt to remove the cord from these hooks. Doing so could cause damage to the TV.

Using This Manual

This manual is divided into five major sections. We recommend that you review the contents before you begin to use your new TV.

1 Connecting and Installing the TV

This section guides you through your initial set up. It shows how to connect to your antenna or cable, and connect any accessories.

2 Basic Set Up

This section teaches you the basic skills needed to operate your new TV.

3 Using your New TV

This section shows the initial setup screen and how to use your remote control.

4 Using your Menus

This section teaches you how to access on-screen menus and adjust your TV's settings.

5 Troubleshooting

This section helps you to correct problems you may encounter with your TV.



Making Connections




Refer to the table below, it will direct you to the diagram suitable to the equipment you will be connecting.

If you will be connecting	See page
Cable or antenna only	3
Cable and antenna	3
Cable box	4
Cable box and cable to view scrambled channels	4
VCR and cable or antenna	5
VCR and cable box	5
Two VCRs for tape editing	6
Satellite Receiver	7
VCR and Satellite Receiver	7
DVD Player	8
Audio system	9
Camcorder to view tapes	9
VCR using S-Link	10
Satellite Receiver using S-Link	10

Cable or Antenna Connections

Connecting directly to cable or an antenna

 
The connection you choose will depend on the cable found in your home. Newer homes will be equipped with standard coaxial cable (see **A**); older homes will probably have 300-ohm twin lead cable (see **B**); still other homes may contain both (see **C**).

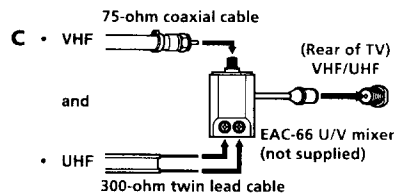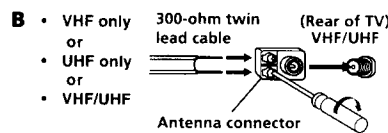

Cable and antenna

KV-32S66, 35S66 only

If your cable provider does not feature local channels, you may find this set up convenient

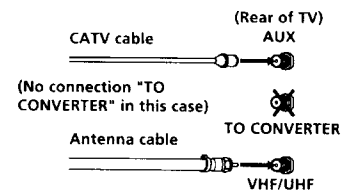

Select CABLE or antenna (ANT) mode by pressing ANT on the remote control.

Note

In order to receive channels with an antenna, you will need to turn your CABLE to OFF and perform the AUTO PROGRAM function, (see page 23).


Cable Box Connections

Some pay cable TV systems use scrambled or encoded signals that require a cable box to view all channels.

Cable box

- 1 Connect the coaxial connector from your cable to the IN on your cable box.
- 2 Using a coaxial cable, connect OUT on your cable box to VHF/UHF on your TV.

If you will be controlling all channel selection through your cable box, you should consider using the CHANNEL FIX feature, (see page 23).

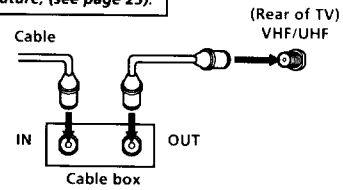

Cable box and cable

KV-32566, 35566 only

For this set up, you can switch between scrambled channels (through your cable box), and normal (CATV) channels by pressing ANT on your remote control.


Notes

- Your Sony remote control can be programmed to operate your cable box, (see page 30).
- When using PIP, you cannot view the AUX input in the window picture.

Tip

Pressing **ANT** switches between these inputs.

If you are connecting a cable box through the AUX input and would like to switch between the AUX and normal (CATV) input you should consider using the CHANNEL FIX feature, (see page 23).

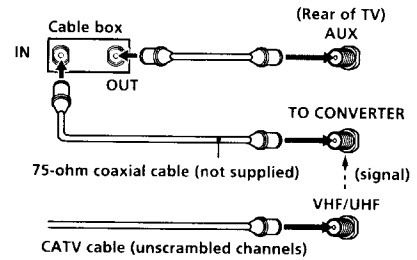

VCR Connections

Connecting an antenna/cable TV system with a VCR

- 1 Attach the coaxial connector from your cable or antenna to IN on your VCR.
- 2 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on your TV.



Tip

If you are connecting a monaural VCR, connect only the single white audio output to the left input on your TV.

Connecting a VCR and TV with a cable box

- 1 Connect the coaxial cable from the wall to IN on your cable box.
- 2 Using a coaxial connector, connect OUT on your cable box to IN on your VCR.
- 3 Connect a coaxial cable (not supplied) from the OUT jack on your VCR to VHF/UHF on your TV.
- 4 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.

For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S VIDEO does not provide sound, your audio connectors must still be connected.

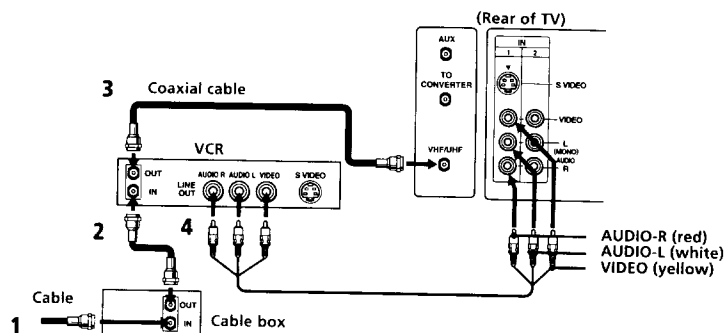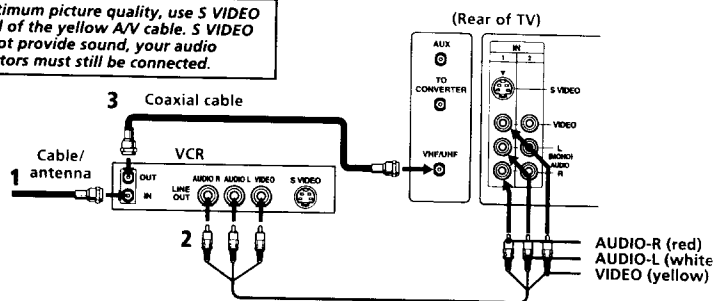

Connecting and Installing the TV (continued)


Connecting two VCRs for tape editing

KV-32V42, 35V42 only

MONITOR OUT gives you the ability to use a second VCR to record a program being played by the primary VCR or to perform tape editing and dubbing.

- 1 Connect the VCR intended for playback using the connection instructions on page 5 of this manual.
- 2 Using A/V connectors, connect AUDIO and VIDEO IN on your VCR intended for recording to MONITOR AUDIO and VIDEO OUT on your TV.

To perform tape editing, set the TV to the video input intended for playback by pressing TV/VIDEO.

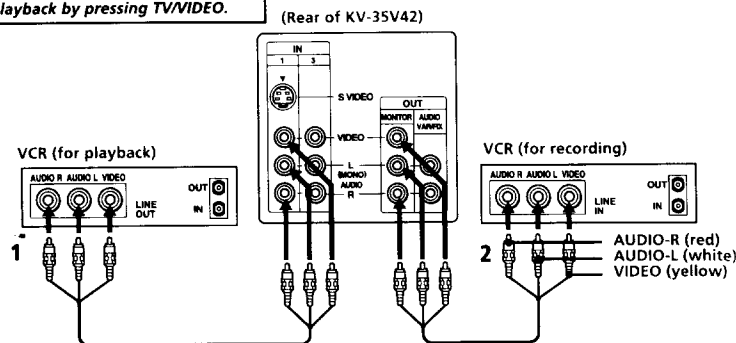


Satellite Receiver Connections

Connecting a satellite receiver

- 1 Connect the cable from your satellite antenna to SATELLITE IN on your receiver.
- 2 Attach the coaxial connector from your cable or antenna to VHF/UHF on your TV.
- 3 Using A/V connectors, connect AUDIO and VIDEO OUT on your receiver to AUDIO and VIDEO IN on your TV.


For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S Video does not provide sound, your audio connectors must still be connected.

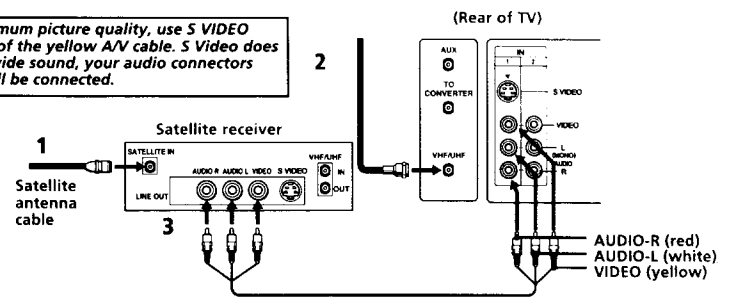

Connecting a satellite receiver and a VCR

- 1 Connect the cable from your satellite antenna to SATELLITE IN on your receiver.
- 2 Attach the coaxial connector from your cable or antenna to IN on your VCR.
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on your TV.
- 4 Using A/V connectors, connect AUDIO and VIDEO OUT on your receiver to AUDIO and VIDEO IN on your VCR.
- 5 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.

Pressing TV/VIDEO on the remote control will allow you to view from the satellite receiver or VCR.

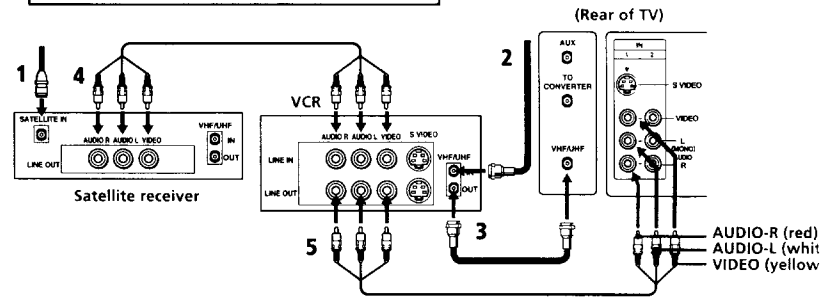


DVD Player Connections

Connecting a DVD Player

- 1** Using audio connectors, connect AUDIO OUT on your DVD player to AUDIO IN on your TV.
- 2** Using an S VIDEO cable, connect S VIDEO on your DVD player to S VIDEO on your TV.

Note


If you do not have an S Video cable, connect a yellow video cable from LINE OUT VIDEO on your DVD to VIDEO IN on your TV.

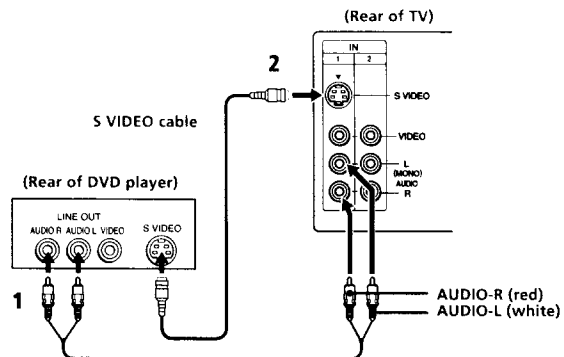


Additional Connections

Connecting an audio system

For an enhanced sound, connect your audio system to your TV.

- 1 Using AUDIO connectors, connect AUDIO OUT on your TV to one of the unused Line inputs (e.g. Tape-2, AUX1, etc.) on your stereo.
- 2 Set your stereo to the chosen Line input and use the AUDIO  menu to set your audio output, (see page 19).

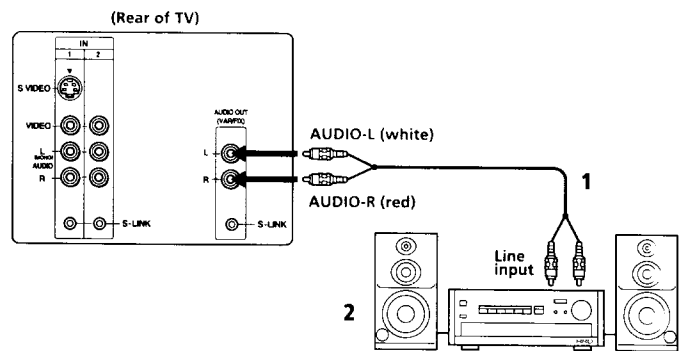

Connecting a camcorder


This connection is convenient for viewing a picture directly from your camcorder.

Using A/V connectors, connect AUDIO and VIDEO OUT on your camcorder to AUDIO and VIDEO IN on your TV.

Connection can also be made directly to the A/V input located on the the rear of the TV.

Tip

If you are connecting a monaural camcorder, connect only the single white audio output to the left input on your TV.

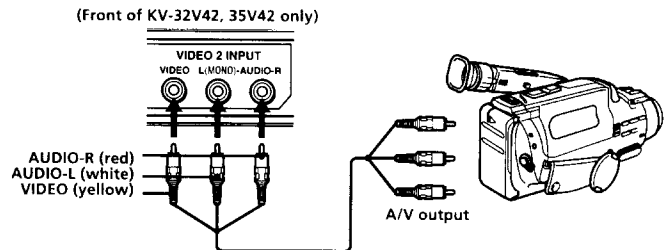


Using Special Sony Features

KV-32S66, 35S66 only

Connecting S-Link to a VCR

S-Link automatically powers on the TV and switches to the correct video input when a tape is inserted in the VCR.

- 1 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.
- 2 Using an S-Link connector (mono mini plug), connect S-LINK on your VCR to S-LINK/CONTROL S-OUT in the same VIDEO IN column on your TV.

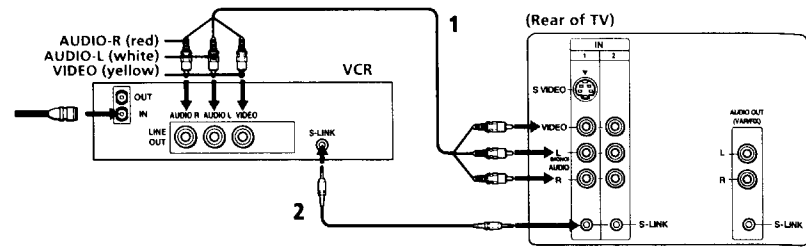

Connecting S-Link to a satellite receiver


When you power on the satellite receiver, S-Link automatically powers on the TV and switches to the correct video input.

- 1 Using A/V connectors, connect AUDIO and VIDEO OUT on your satellite receiver to AUDIO and VIDEO IN on your TV.
- 2 Using an S-Link connector (mono mini plug), connect S-LINK on your satellite receiver to S-LINK/CONTROL S-OUT in the same VIDEO IN column on your TV.

Note


The S-Link feature will override the "SKIP" VIDEO LABEL input, (see page 21).

The S-Link connector must be in the same VIDEO-IN column as the connected A/V cables.

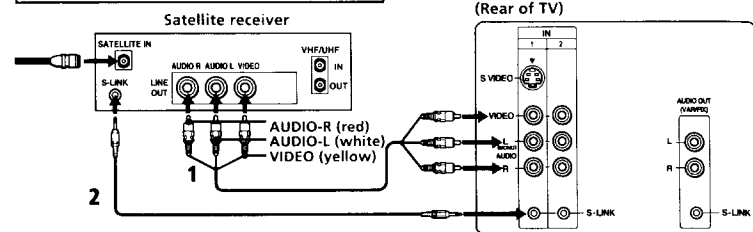

Inserting batteries


Insert two size AA (R6) batteries (supplied) by matching the + and - on the batteries to the diagram inside the battery compartment.

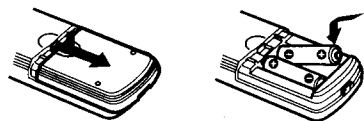

Notes

- Remove the batteries to avoid damage from possible battery leakage whenever you anticipate that the remote control will not be used for an extended period.
- Handle the remote control with care. Avoid dropping it, getting it wet, or placing it in direct sunlight, near a heater, or where the humidity is high.
- Your remote control can be programmed to operate most video equipment, (see page 28).

Using the remote control move & select buttons

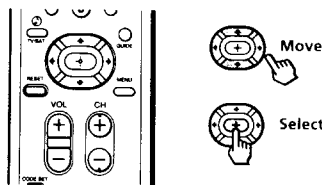


The supplied remote control has "arrow" buttons (↶, ↷, ↸, ↹) which allow for movement of the on-screen (▶) cursor. Pressing on the outer buttons will cause the cursor to *move* in the corresponding direction. Pressing the center button (⊕) will *select* the item.

Front panel menu control

U.S. models only

The front panel controls allow access to the on-screen menus without the use of a remote control.

 Press the SET UP button on the TV, then press TV/VIDEO to access the menus. Follow the on-screen instructions to adjust your TV settings.



For KV-32V42, 35V42 the control buttons are located on the top of the TV.

Setting up the TV automatically

 
After you have finished connecting your TV, you will want to run AUTO PROGRAM to set up your channels.

The AUTO PROGRAM feature does not apply for installations that use a cable box for all channel selection.

Tips

- Perform this function during the day, with the antenna and/or cable properly connected, to ensure that all available channels will be broadcasting and receivable.
- If your cable or antenna is connected to AUX, press ANT until AUX appears next to the channel number.

Using the buttons on the front of the TV:



For KV-32V42, 35V42, the control buttons are located on the top of the TV.

- 1 Press POWER to turn on the TV. The initial setup screen appears.

(U.S. models only) (Canadian models only)

ENGLISH: [CH +]	ENGLISH: [CH +]
ESPAÑOL: [CH -]	ESPAÑOL: [CH -]
AUTO SET UP: [VOL +]	FRANÇAIS: [VOL +]
DEMO: [VOL -]	AUTO SET UP: [VOL -]
MENU: [TV/VIDEO]	DEMO: [TV/VIDEO]
First please connect cable/antenna	First please connect cable/antenna

- 2 Make your language selection, the menus will change to reflect your choice.
- 3 Follow the on-screen instructions to continue AUTO SET UP or for a DEMO of the menus.

U.S. models only

- 4 Press TV/VIDEO to operate the on-screen menus without the use of a remote control. Follow the on-screen instructions to make adjustments to your TV settings.

To perform AUTO SET UP again

Press the SET UP button on the TV.

Tip

To reset your TV to factory settings, turn the TV on. Then, while pressing the RESET button on your remote control, press the POWER button on your TV. The TV will turn itself off, then back on.

 
 



 

 
Watching the TV

The following chart explains more advanced buttons on your remote control.



REFER TO THE
ILLUSTRATION OF THE
REMOTE CONTROL ON THE
INSIDE FRONT COVER OF
THIS MANUAL AS YOU
REVIEW THIS CHART


Using the White Labeled Buttons for TV Operations	
	Press when you want to turn connected equipment on and off.
	Press when you want to control connected equipment with your remote control, (see pages 28-30 for instructions on programming your remote control).
	Use for direct channel selection. Press 0-9 to select a channel, the channel will change after 2 seconds, or you can press ENTER for immediate selection.
	Cycles through the VIDEO MODE settings: VIVID, MOVIE, STANDARD.
	Alternates back and forth between the last two channels selected with the 0-9 keys.
	Instantly turns off the sound. Press again or press VOL + to restore sound.
	Turns the TV off in approximately 30, 60, or 90 minutes. Cancel by pressing until SLEEP OFF appears.
	Press to return to factory settings while in an on-screen menu.

Using the White Labeled Buttons for TV Operations	
	Press once to display current time and CHANNEL CAPTION (if set) and channel number. Press again to activate current CAPTION VISION setting. To cancel, press DISPLAY until DISPLAY OFF appears.
	Press repeatedly to cycle through available video inputs.
	Press to change the VHF/UHF input to the AUX input. (KV-32S66, 35S66 only)
	Press when you are finished using a VCR and you want to switch to the TV input. Your VCR power will remain on.
	Cycles through the Multi-channel TV Sound (MTS) options: STEREO, SAP (Second Audio Program), MONO (see page 19).
	Powers off all Sony equipment at once. <i>This feature may not work with older Sony equipment.</i>
	Cycles through the available audio settings.
	Brings up the custom guide of your satellite receiver. (Your remote control must be programmed to operate your satellite receiver, see page 30)

Using Picture-in-Picture – PIP

KV-32S66, 35S66 only

Picture-in-Picture (PIP) allows you to watch two channels simultaneously, one in the large main window and another in a small window picture.

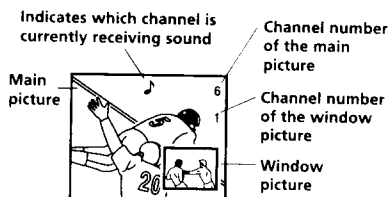

Notes

- You must press **TV (FUNCTION)** before you can control PIP with the yellow labeled buttons.
- The **AUX** input cannot be viewed in the window picture.



REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART


Use the Yellow Labeled Buttons for PIP Operations

PIP 	Displays the window picture. Press again to decrease the size. To cancel, press until the window picture turns off.
TV/VIDEO 	Cycles through available video inputs: TV, VIDEO 1, VIDEO 2
AUDIO 	Alternates sound between the main picture and the window picture. A musical note will appear to indicate which picture is receiving sound.
TV/VTR + CH -	Changes the channel in the window picture.
POSITION 	Moves the location of the window picture.
FREEZE 	Press to freeze the window picture. Press again to restore the picture.
SWAP 	Switches the position of the main picture with the window picture.


Learning menu selection

Use the **MENU** button to access a menu and use the arrow buttons (◀ or ▶) to alter settings. Use the following example, in which we activate the **CABLE**, to learn how to modify settings.

- 1 Press the **MENU** button.
The main menu appears.

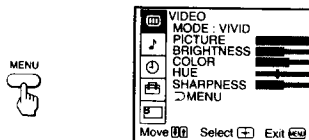


- 2 Press ◀ or ▶ to highlight the desired menu (in this case **SET UP**), and press (+) to select it.

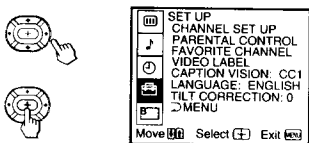

- 3 Press ◀ or ▶ to move to the desired option and press (+).




- 4 Press ◀ or ▶ to move to the desired feature and press (+).

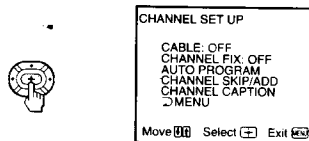

Options for your selection will be highlighted.

- 5 Press ◀ or ▶ to make your selection and press (+).

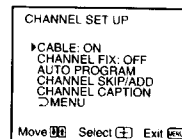

When you are finished making changes to the selected menu, choose **MENU** to return to the main menu.




Tip

Pressing **MENU** on the remote control will allow you to exit from the menus at any time.

Quick start to the menus

The following is a guide to your menus.

To select a menu:

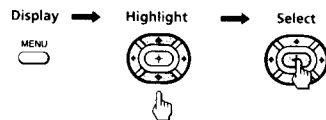


Note


Menus shown are for KV-35S66, your menus may not look exactly like those illustrated.

VIDEO MODE: VIVID PICTURE BRIGHTNESS COLOR HUE SHARPNESS MENU	<p>The VIDEO menu will allow you to make adjustments to your picture settings. It will also allow you to customize the picture MODE based on the type of program you are viewing.</p>
AUDIO TREBLE BASS BALANCE EFFECT: OFF MTS: STEREO SPEAKER: ON AUDIO OUT: VARIABLE MENU	<p>The AUDIO menu offers enhanced audio options such as listening to second audio programming (SAP), or customizing the EFFECT of the sound on your TV.</p>
TIMER DAYLIGHT SAVING: NO CURRENT TIME SET ON/OFF TIMER MENU	<p>The TIMER menu sets the clock on your TV and allows you to program your TV for scheduled viewing using the ON/OFF TIMER.</p>
SET UP CHANNEL SET UP PARENTAL CONTROL FAVORITE CHANNEL VIDEO LABEL CAPTION VISION: CC1 LANGUAGE: ENGLISH TILT CORRECTION: 0 MENU	<p>The SET UP menu provides several options for setting up your channels, labeling your TV/VIDEO inputs, and selecting the LANGUAGE of your menus.</p>
Escape to Basic Menu	<p>The Basic Menu provides quick access to frequently used settings.</p>
<p>CHANNEL SET UP</p> <p>▶CABLE: ON CHANNEL FIX: OFF AUTO PROGRAM CHANNEL SKIP/ADD CHANNEL CAPTION MENU</p>	<p>▶VIDEO MODE: VIVID PICTURE: AUDIO: OFF ADVANCED MENU</p>

Using the VIDEO menu

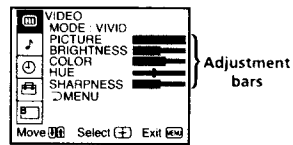


To select the VIDEO menu:

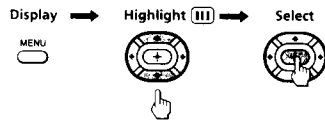


MODE <i>Customized picture viewing</i>	VIVID: Select for enhanced picture contrast and sharpness. MOVIE: Select for a finely detailed picture. STANDARD: Select to receive a standard picture. <i>Press the PICTURE MODE button to access one of the above settings directly.</i>
PICTURE <i>Picture contrast</i>	Adjust left to decrease picture contrast and soften the color. Adjust right to increase picture contrast and create more vivid color.
BRIGHTNESS <i>Picture adjustment</i>	Adjust left to darken the picture. Adjust right to brighten the picture.
COLOR <i>Color saturation</i>	Adjust left to decrease color intensity or saturation. Adjust right to increase color intensity or saturation.
HUE <i>Color tones</i>	Adjust left to increase the red tones. Adjust right to decrease the red tones.
SHARPNESS <i>Picture detail</i>	Adjust left to soften the picture detail. Adjust right to sharpen the picture detail.

Using the AUDIO 🎵 menu

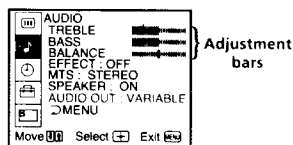

To select the AUDIO 🎵 menu:

 


Tips 💡


- Press **⏮** to cycle through your AUDIO options.
- Press **MTS/SAP** on your remote control to cycle through the MTS options.

TREBLE	Adjust left or right to decrease or increase higher frequency sounds.
BASS	Adjust left or right to decrease or increase lower frequency sounds.
BALANCE	Adjust left or right to emphasize left and right speaker balance.
AUTO VOLUME <i>Stabilizes volume</i>	KV-32V42, 35V42 only ON: Select to stabilize the volume. OFF: Select to turn AUTO VOLUME off.
EFFECT <i>Enhanced audio</i>	SURROUND: Simulates theater quality sound for programs broadcast in stereo. (KV-32S42, 32S66, 35S42, 35S66). SIMULATED: Adds a stereo-like effect to mono programs. (KV-32V42, 35V42 only) SRS: Produces a dynamic three dimensional sound for stereo signals. (KV-32V42, 35V42 only) OFF: Normal stereo or mono reception.
MTS <i>Multi-Channel sound</i>	MONO: Select to reduce noise in areas with poor reception. SAP: Select to listen to bilingual broadcast or other Second Audio Programs (SAP). STEREO: Select when viewing a broadcast in stereo.
SPEAKER <i>Custom selection of audio output source</i>	ON: Select to listen to the sound from the TV speakers with or without a separate stereo system. OFF: Select to turn off the TV speakers and listen to the TV's sound only through external audio system speakers.
AUDIO OUT <i>Use to control the TV's volume through a stereo</i>	AUDIO OUT can only be set when SPEAKER is set to OFF. VARIABLE: Adjust the volume through your TV. FIXED: Adjust the TV volume through a connected stereo.

Using the TIMER ⌚ menu

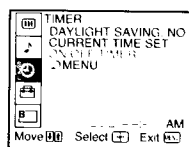

To select the TIMER ⌚ menu:

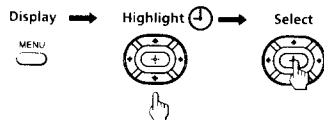

Tip


Set DAYLIGHT SAVING before setting the clock.

DAYLIGHT SAVING	<p>YES: Select to compensate for Daylight Saving Time.</p> <p>NO: Select at the end of Daylight Saving Time.</p>	
<p>CURRENT TIME SET</p> <p><i>Necessary for the ON/OFF TIMER</i></p>	<p>With the CURRENT TIME SET menu open:</p> <ol style="list-style-type: none"> 1 Press ENTER. 2 Press ▲ or ▼ until the current day is displayed. Press ENTER to select. 3 Press ▲ or ▼ until the current hour and AM/PM is displayed. Press ENTER to select. 4 Press ▲ or ▼ until the current minute is displayed, and press ENTER. <p><i>Any loss of power will cause these settings to be cleared.</i></p>	
<p>ON/OFF TIMER</p> <p><i>Wake up or scheduled viewing</i></p>	<p><i>CURRENT TIME SET must be programmed before you can use the ON/OFF TIMER.</i></p> <p>With the ON/OFF TIMER menu open:</p> <ol style="list-style-type: none"> 1 Press ENTER. 2 Press ▲ or ▼ until the desired day or range of days is displayed. Press ENTER to select. 3 Indicate the time that you want the TV to turn on (hour, then minutes) by pressing ▲ or ▼ and then ENTER. 4 Set the time duration (maximum of 6 hours) by pressing ▲ or ▼ and then ENTER. 5 Press ▲ or ▼ until you reach the desired channel. Press ENTER to select. <p><i>When you perform AUTO PROGRAM, all ON/OFF TIMER settings will be cleared.</i></p>	

Using the SET UP menu



 To select the SET UP menu:



Note

The FAVORITE CHANNEL feature is not available for the AUX input.


CHANNEL SET UP	The CHANNEL SET UP menu is a submenu which provides further options for setting up your TV. (see page 23)
PARENTAL CONTROL	The PARENTAL CONTROL feature provides parents several options for programming the TV to block shows based on their rating. (see pages 24-27).
FAVORITE CHANNEL <i>Quick access to favorite channels</i>	<p>AUTO: Select to automatically program the last five channels accessed with the 0-9 buttons.</p> <p>MANUAL: Select to program your channels manually.</p> <p>Using FAVORITE CHANNEL:</p> <ol style="list-style-type: none"> 1 Exit all menus and press your FAVORITE CHANNEL options will appear. 2 Press or to access the channel you want to watch, and press . <p>For KV-32S66, 35S66 only If PREVIEW is set to ON, a window picture displays your favorite channels as you cycle through the options.</p> <div data-bbox="1435 264 1567 365" data-label="Image"> </div> <div data-bbox="1435 390 1567 491" data-label="Image"> </div>
VIDEO LABEL <i>Label connected equipment for easy recognition</i>	<p>With the VIDEO LABEL window open:</p> <ol style="list-style-type: none"> 1 Press or to access the input you want to label and press . 2 Press or to choose the label and press . <p>VIDEO LABEL Options: VHS, 8mm, BETA, LD, GAME, SAT, DVD, WEB, RECEIVER, DTV, SKIP</p> <p>If you select SKIP, your TV will skip this connection when you press the TV/VIDEO button. (Only available for VIDEO 2, VIDEO 3)</p> <div data-bbox="1435 554 1567 655" data-label="Image"> </div>




Using Your Menus (continued)

CAPTION VISION <i>Closed Captioning and channel information</i>	CC1, 2, 3 or 4: Displays a printed version of the dialog or sound effects of a program, (the mode should be set to CC1 for most programs). TEXT1, 2, 3 or 4: Displays network/station information presented using either half or the whole screen. XDS (Extended Data Service): Displays network name, program name, program length, and time of the show if the broadcaster offers this service. To activate CAPTION VISION Press the DISPLAY button on the remote control, until your CAPTION VISION selection is displayed.
LANGUAGE	Select from available languages to display all menus in your language of choice.
TILT CORRECTION	For KV-35S42, 35S66, 35V42 only Press ▲ or ▼ to correct any tilt of the picture between +5 and -5 and press GO .

Using the CHANNEL SET UP menu

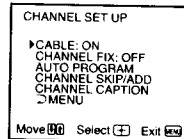

To select the CHANNEL SET UP menu:

 

Note

Your remote control can be programmed to operate your cable box. (see page 30)

CABLE	ON: Select if you are receiving cable channels with a CATV cable. OFF: Select if you are using an antenna. You will need to run AUTO PROGRAM after changing your CABLE settings.	
CHANNEL FIX <i>Useful when you have a cable box or satellite receiver connected</i>	2-6: Select when you want to control all channel selection through a cable box. Select the appropriate channel number (usually 3 or 4) and use the cable box's remote control for selection. AUX 2-6: Select when a cable box is connected to the AUX input, (see page 4). Press the ANT button to alternate between inputs. (KV-32S66, 35S66 only) VIDEO 1: Select from available video inputs when you have video equipment connected (e.g. satellite receiver) and you want your TV fixed to it.	
AUTO PROGRAM	Instructs the TV to program all receivable channels.	
CHANNEL SKIP/ADD <i>Label up to 12 channels with their call letters</i>	With the CHANNEL SKIP/ADD window open: 1 Select the desired channel. 2 Press SKIP or ADD (only one option will be available).	
CHANNEL CAPTION <i>Label up to 12 channels with their call letters</i>	With the CHANNEL CAPTION menu open: 1 Press SKIP or ADD and then UP or DOWN to access the desired channel, and press SKIP or ADD again. 2 Press UP or DOWN to display the first letter or number of the caption and press SKIP or ADD to select it. 3 Press SKIP or ADD to activate.	

The Parental Guideline Rating System

This table provides a brief overview of the rating systems available for the PARENTAL CONTROL feature.

For detailed information on how to change your TV rating, see pages 26-27.

Notes

- The content ratings will increase depending on the level of the age-based rating. For example, a program with a TV-PG V (Violence) rating may contain moderate violence, while a TV-14 V (Violence) rating may contain more intense violence.
- If you choose to block unrated TV programs, please be aware that the following programs may be blocked: emergency broadcasts, political programs, sports, news, public service announcements, religious programs and weather.

24

Overview of the U.S. Ratings

TV RATINGS

Block programs by their rating, content or both

Age based options:

TV-Y: All children.
TV-Y7: Directed to older children.
TV-G: General Audience.
TV-PG: Parental Guidance suggested.
TV-14: Parents Strongly cautioned.
TV-MA: Mature Audience only.

Content based options:

FV: Fantasy Violence.
D: Suggestive Dialogue.
L: Strong Language.
S: Sexual situations.
V: Violence.

TV RATINGS

►TV-Y: - FV: -
 TV-Y7: -
 TV-G: - D L S V-
 TV-PG: - D L S V-
 TV-14: - L S V-
 TV-MA: -
 ►MENU
 Select category
 Move [left] Select [right] Exit [red]

MOVIE RATINGS

(U.S. models only)
G: All children and General Audience.
PG: Parental Guidance suggested.
PG-13: Parental Guidance for children under 13.
R: Restricted viewing, Parental Guidance is suggested for children under 17.
NC-17: No one 17 and under allowed.
X: No one 17 and under allowed.

MOVIE RATINGS

►G: -
 PG: -
 PG-13: -
 R: -
 NC-17: -
 X: -
 ►MENU
 Select rating
 Move [left] Select [right] Exit [red]

UNRATED

Block programs or movies that are broadcast without a rating

(U.S. models only)
VIEW ALL: Allows all unrated programming.
BLOCK TV: Blocks all unrated TV programs.
BLOCK MOVIES: Blocks all unrated movies.
BLOCK ALL: Blocks all unrated programming.

CUSTOM RATINGS

TV RATINGS
 MOVIE RATINGS
 ►UNRATED: VIEW ALL
 ►MENU

Select category
 Move [left] Select [right] Exit [red]

Overview of the Canadian Ratings		
ENGLISH RATINGS <i>For Canadian programs that are broadcast in English</i>	(Canadian models only) C: All children. C8+: Children 8 years and older. G: General programming. PG: Parental Guidance. 14+: Viewers 14 and older. 18+: Adult programming.	<div> ENGLISH RATINGS ▶C: - C8+: - G: - PG: - 14+: - 18+: - ▢MENU Select rating Move 06 Select + Exit 03 </div>
FRENCH RATINGS <i>For Canadian programs that are broadcast in French</i>	(Canadian models only) G: General programming. 8 ans+: Not recommended for young children. 13 ans+: Not recommended for ages under 13. 16 ans+: Not recommended for ages under 16 18 ans+: Programming restricted to adults.	<div> FRENCH RATINGS ▶G: - 8 ans+: - 13 ans+: - 16 ans+: - 18 ans+: - ▢MENU Select rating Move 06 Select + Exit 03 </div>
U.S.A. RATINGS <i>For programs from the United States</i>	(Canadian models only) Please see TV RATINGS on page 24 for information on U.S.A. RATINGS.	

 
Using the PARENTAL CONTROL menu

This section shows you how to access the PARENTAL CONTROL menu. After you follow the example below, the next section shows you how to adjust your TV's rating.

- 1 Press **MENU** and select the **SET UP** menu.




- 2 Point the cursor to **PARENTAL CONTROL** and press **ENTER**.




You will be asked to enter a 4-digit password for any future access into the PARENTAL CONTROL menu.

- 3 Press **ENTER** and use the 0-9 buttons to enter your 4-digit password.

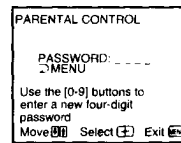


- 4 Confirm your password by entering it again.

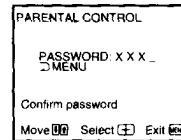

Once your password is set correctly, you will be taken into the PARENTAL CONTROL menu.

In order to change the RATING you will need to set PARENTAL LOCK to ON.

- 5 Point the cursor at **PARENTAL LOCK** and press **ENTER**. Press **UP** or **DOWN** to ON and press **ENTER**.

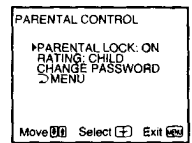


See pages 24-25 for an overview of the Parental Guideline ratings.

Tip

Keep this instruction manual in a safe place. In the event that you forget your password, please see page 32.

Setting the TV's RATING


This section provides information on how to set the TV's RATING and how to change your password.

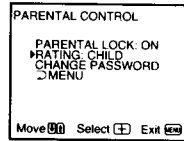

Notes

- Entering your password to view a blocked program will temporarily turn PARENTAL LOCK to OFF.
- To reactivate your PARENTAL CONTROL settings, turn the TV off then back on; the TV will restore your rating settings.

PARENTAL LOCK <i>Turns ratings on/off</i>	ON: Select to activate the RATING. OFF: Turns off current ratings.
RATING	<p>If you are not familiar with the Parental Guideline rating system, you should use one of the following preselected categories to help simplify the rating selection.</p> <p>The following maximum ratings will be allowed:</p> <p>CHILD: TV-Y, TV-G, G (U.S. models only), TV-Y, TV-G, G, C (Canadian models only).</p> <p>YOUTH: TV-PG, PG (U.S. models only), TV-PG, PG, 8 ans+ (Canadian models only).</p> <p>YOUNG ADULT: TV-14, PG-13 (U.S. models only), TV-14, 14+, 13 ans+ (Canadian models only).</p> <p>CUSTOM: If you prefer to set more restrictive ratings, highlight CUSTOM and press ENTER. See pages 25-26, for an overview of the rating systems available.</p> <p>In the CUSTOM RATINGS menu:</p> <ol style="list-style-type: none">1 Select the desired rating category and press ENTER.2 Press UP or DOWN to select the maximum rating or content and press ENTER.3 Press UP or DOWN to block or unblock the rating or content and press ENTER. <p><i>Once you have blocked a rating or content, all higher ratings or contents will be automatically blocked.</i></p> <p>To view a blocked program:</p> <p>Press ENTER on the remote control, then use the 0-9 buttons to enter your password.</p>
CHANGE PASSWORD	<p>To reset your password:</p> <ol style="list-style-type: none">1 Move the cursor to CHANGE PASSWORD press ENTER.2 Use the 0-9 buttons to create a new password, enter again to confirm. <p><i>In the event that you forget your password, see page 32.</i></p>

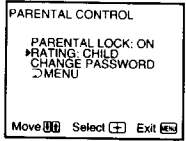

Programming the remote

You can use the supplied remote control to operate Sony or non-Sony video equipment.

- 1 Press **CODE SET**.
- 2 Press **VTR/DVD (FUNCTION)**.
- 3 Use the 0-9 buttons to key in the manufacturer's code number from the following chart.
- 4 Press **ENTER**.

VCR code numbers

Manufacturer	Code
Sony	301, 302, 303
Admiral (M. Ward)	327
Aiwa	338, 344
Audio Dynamic	314, 337
Broksonic	319, 317
Canon	309, 308
Citizen	332
Craig	302, 332
Criterion	315
Curtis Mathes	304, 338, 309
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318, 341
Fisher	330, 335
Funai	338
General Electric	329, 304, 309
Go Video	322, 339, 340
Goldstar	332

28

Hitachi	306, 304, 305, 338
Instant Replay	309, 308
JC Penney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337, 345, 346, 347
Kenwood	314, 336, 332, 337
LXI (Sears)	332, 305, 330, 335, 338
Magnavox	308, 309, 310
Marantz	314, 336, 337
Marta	332
Memorex	309, 335
Minolta	305, 304
Mitsubishi/MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Optimus	327
Panasonic	308, 309, 306, 307
Pentax	305, 304
Philco	308, 309
Philips	308, 309, 310
Pioneer	308
Quasar	308, 309, 306
RCA/PROSCAN	304, 305, 308, 309, 311, 312, 313, 310, 329
Realistic	309, 330, 328, 335, 324, 338
Sansui	314
Samsung	322, 313, 321
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Shintom	315
Signature 2000 (M. Ward)	338, 327
SV2000	338
Sylvania	308, 309, 338, 310
Symphonic	338
Tashiro	332
Tatung	314, 336, 337

Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	314, 330, 336, 337
Zenith	331

Operating a VCR Buttons on the remote control

To turn on or off	Press VTR/DVD (POWER) .
To select a channel directly	Press the 0-9 buttons.
To change channels	Press CH +/- .
To record	Press ▶ and ● simultaneously.
To play	Press ▶ .
To stop	Press ■ .
To fast forward	Press ▶▶ .
To rewind the tape	Press ◀◀ .
To pause	Press II .
	To resume normal playback, press again or press ▶ .
To scan	Press ▶▶ or ◀◀ during playback.
	To resume normal playback, release the button.
To change input mode	Press TV/VTR .

Tips

- In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied remote control. In this case, please use the equipment's own remote control.
- When you remove the batteries, the code number may revert to the factory setting.
- The code numbers for Sony VCRs are assigned at the factory as follows:

VHS VCR	301
	(preset code for the supplied remote control)
8 mm VCR	302
Beta, ED Beta VCRs	303

Laserdisc code numbers

Manufacturer	Code
Sony	701
Panasonic	704, 710
Pioneer	702

Operating a Laserdisc	Buttons on the remote control
To turn on or off	Press VTR/DVD (POWER) .
To play	Press ▶ .
To stop	Press ■ .
To pause	Press II . To resume normal playback, press again or press ▶ .
To scan	Press ▶▶ or ◀◀ during playback. To resume normal playback, press ▶ .
To search the chapter forward or backward	Press CH +/- .

Tip

If you will not be programming a satellite receiver or cable box into the SAT/CABLE function of your remote, you can use it to program other video equipment (e.g. DVD, MDP, or second VCR).

DVD (Digital Versatile Disc) code numbers

Manufacturer	Code
Sony	751
Panasonic	753
Pioneer	752
RCA	755
Toshiba	754

Operating a DVD player	Buttons on the remote control
To turn on or off	Press VTR/DVD (POWER) .
To play	Press ▶ .
To stop	Press ■ .
To pause	Press II . To resume normal playback, press again or press ▶ .
To scan	Press ▶▶ or ◀◀ during playback. To resume normal playback, press ▶ .
To search the chapter forward or backward	Press CH +/- .
To select chapters directly	0-9 + ENTER .
MENU	Press to display DVD menu.
To move cursor in menu	Use your arrow buttons ↑, ↓, ←, → .

Programming the remote control

You can program the supplied remote control to operate a cable box or satellite receiver.

- 1 Press CODE SET.
- 2 Press SAT/CABLE (FUNCTION).
- 3 Use the 0-9 buttons to key in the manufacturer's code number from the following chart.
- 4 Press ENTER.

For more details on operating the cable box or satellite receiver

Refer to the operating instructions that were supplied with the equipment.

If the remote control doesn't work

First, try repeating the setup procedures using the other codes listed for your equipment.

Tips

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, you may not be able to operate your equipment with the supplied remote control. In this case, use the equipment's supplied remote control.
- Whenever you remove the batteries, the code numbers may revert to the factory setting.

Cable box code numbers

Manufacturer	Code
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G. I.	201, 202, 203, 204, 205, 206, 207, 208, 218
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213

Satellite receiver code numbers

Manufacturer	Code
Sony	801 (preset code for remote control)
General Electric	802
Hitachi	805
Hughes	804
Panasonic	803
RCA/PROSCAN	802, 808
Toshiba	806, 807

Troubleshooting

Consult the table below; it suggests solutions to specific problems.

You want to restore the TV's factory settings		<ul style="list-style-type: none"> First, turn the TV on. Then while pressing the RESET button on the remote control, press the POWER button on the TV. The TV will turn itself off and then back on. When the TV turns on again, all settings will be reset, and the initial setup screen will appear.
A red light keeps flashing on the TV for more than a few seconds	<ul style="list-style-type: none"> Your TV may need service. 	<ul style="list-style-type: none"> Call your local Sony service center.
TV makes a noise when turned on	<ul style="list-style-type: none"> This is a normal function of your TV. 	
Screen is not lit and there is no sound	<ul style="list-style-type: none"> Power cord may not be plugged in. Remote control batteries may not be inserted correctly. TV/VIDEO setting may be incorrect. Current program may exceed PARENTAL CONTROL settings. 	<ul style="list-style-type: none"> Check your power cord. Re-insert the batteries in your remote control. Press TV/VIDEO until you receive a channel. Check your PARENTAL CONTROL settings, (page 27).
Poor or no picture (screen lit), good sound	<ul style="list-style-type: none"> VIDEO menu settings may not be adjusted correctly. Antenna/cable connections may be faulty. VIDEO LABEL inputs may be set to WEB. (This label darkens the screen for ideal WebTV viewing) 	<ul style="list-style-type: none"> Readjust your VIDEO menu settings, (page 18). Check your VIDEO LABEL settings, (page 21).
Good picture, no sound	<ul style="list-style-type: none"> Sound may be set to MUTE. Your TV may be set to SAP. SPEAKER may not be set correctly. 	<ul style="list-style-type: none"> Press MUTE. Check the MTS setting in the AUDIO menu, (page 19). Check your SPEAKER settings, (page 19).
No color	<ul style="list-style-type: none"> Color settings may not be adjusted correctly. 	<ul style="list-style-type: none"> Adjust the COLOR settings in the VIDEO menu, (page 18).
Only snow and noise appear on the screen	<ul style="list-style-type: none"> CABLE may not be set correctly in the CHANNEL SET UP menu. Antenna/cable connections may not be correct. TV may be set to AUX mode. 	<ul style="list-style-type: none"> Ensure that you have selected the correct CABLE mode in the CHANNEL SET UP menu, (page 23). Press ANT on your remote control to change the input mode, (page 14).

Cannot receive upper channels (UHF) when using an antenna	<ul style="list-style-type: none"> CABLE setting may not be correct in the CHANNEL SET UP menu. 	<ul style="list-style-type: none"> Ensure that CABLE is set to OFF in the CHANNEL SET UP menu, (page 23). Use AUTO PROGRAM to add receivable channels that are not presently in TV memory, (page 23).
Cannot receive any channels when using cable	<ul style="list-style-type: none"> CABLE setting may not be correct in the CHANNEL SET UP menu. 	<ul style="list-style-type: none"> Ensure that CABLE is set to ON in the CHANNEL SET UP menu, (page 23). Use AUTO PROGRAM to add receivable channels that are not presently in TV memory, (page 23).
Cannot gain enough volume when using a cable box	<ul style="list-style-type: none"> Volume may not be adjusted on your cable box. 	<ul style="list-style-type: none"> Use the remote control supplied with the cable box.
TV is fixed to one channel	<ul style="list-style-type: none"> CHANNEL FIX settings may not be correct. 	<ul style="list-style-type: none"> Check your CHANNEL FIX settings, (page 23).
Lost password for PARENTAL CONTROL		<ul style="list-style-type: none"> In the password screen, enter the following master password: 4357. The master password cannot be used to unlock currently blocked channels.

If, after reading these operating instructions, you have additional questions related to the use of your Sony television, please call our Direct Response Center at 1-800-222-SONY (7669) (U.S. residents only) or (416) 499-SONY (7669) (Canadian residents only).

Supplied accessories

Remote control RM-Y168 (KV-32S42, 32V42, 35S42, 35V42 only), (1)
 RM-Y169 (KV-32S66, 35S66 only)(1)
 Batteries size AA (R6) (2)

Optional accessories

Connecting cables
 A/V Cable VMC-810/820/830HG
 Audio Cable RKC-515HG
 S-Link Cable RK-G69HG
 S Video Cable YC-15/30HG

TV Stand SU-32A4, SU-35A4

	KV - 32S42	KV - 32S66	KV - 32V42	KV - 35S42	KV - 35S66	KV - 35V42
Power requirements	120 V, 60 Hz	120 V, 60 Hz	120 V, 60 Hz	120 V, 60 Hz	120 V, 60 Hz	120 V, 60 Hz
Number of inputs/outputs						
Video ¹⁾	1	2	3	2	2	3
S VIDEO ²⁾	1	1	1	1	1	1
Audio ³⁾	1	2	3	2	2	3
Audio out ⁴⁾	1	1	1	1	1	1
Monitor out ¹⁾	—	—	1	—	—	1
S-Link	—	3	—	—	3	—
Speaker output (W)	5W x 2	5W x 2	5W x 2	5W x 2	5W x 2	5W x 2
Power consumption (W)						
In use (Max.)	180 W	180 W	180 W	210 W	210 W	210 W
In standby	2 W	2 W	2 W	2 W	2 W	2 W
Dimensions (W/H/D)						
(mm)	791 x 707 x 604.5 mm	791 x 707 x 604.5 mm	821 x 675.3 x 587 mm	870 x 761 x 653 mm	870 x 761 x 653 mm	920 x 730.8 x 641.8 mm
(in.)	31 x 27 13/16 x 23 3/4 in	31 x 27 13/16 x 23 3/4 in	32 3/8 x 26 5/8 x 23 1/8 in	34 1/4 x 30 x 25 5/8 in	34 1/4 x 30 x 25 5/8 in	36 3/4 x 28 3/4 x 25 1/4 in
Mass (kg)	65 kg	65 kg	70 kg	83 kg	83 kg	90 kg
(lb)	143 lbs	143 lbs	154 lbs	183 lbs	183 lbs	203 lbs

Notes

- ¹⁾ 1 Vp-p, 75 ohms unbalanced, sync negative
²⁾ Y: 1 Vp-p, 75 ohms unbalanced, sync negative
C: 0.286 Vp-p (Burst signal), 75 ohms
³⁾ 500 mVrms Impedance: 47 kilohms
⁴⁾ More than 408 mVrms at the maximum volume setting (variable)
More than 408 mVrms (fix)
Impedance (Output): 2 kilohms

Design and specifications are subject to change without notice.

Television system

American TV standard, NTSC

Channel coverage

VHF: 2-13/UHF: 14-69/CATV: 1-125

Picture tube

Trinitron® tube

Visible screen size

32-inch picture measured diagonally (KV-32S42, 32S66, 32V42 only)

35-inch picture measured diagonally (KV-35S42, 35S66, 35V42 only)

Actual screen size

34-inch picture measured diagonally (KV-32S42, 32S66, 32V42 only)

37-inch picture measured diagonally (KV-35S42, 35S66, 35V42 only)

Antenna


 
 
75 ohm external terminal for VHF/UHF




(●)* SRS (SOUND RETRIEVAL SYSTEM)

The (●) SRS (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

The word 'SRS' and the SRS symbol (●) are registered trademarks of SRS Labs, Inc.

Licensed by BBE Sound, Inc. under USP 4638258.4482866. BBE and BBE symbol are trademarks of BBE Sound, Inc.

A			
Adjusting your menus	16	CHANNEL SET UP MENU	23
ANT	14	AUTO PROGRAM	23
Antenna cable	3	CABLE	23
Antenna connector	3	CHANNEL CAPTION	23
AUDIO  button	14, 15, 19	CHANNEL FIX	23
AUDIO menu operations 		CHANNEL SKIP/ADD	23
AUDIO OUT	19	COLOR	18
BALANCE	19	Connecting TV to	3
BASS	19	Antenna	3
EFFECT	19	Audio system	9
MTS	19	Cable	3
SPEAKER	19	Cable box and cable	4
TREBLE	19	Camcorder	9
AUDIO OUT		CONTROL S	10
FIXED	19	DVD player	8
VARIABLE	19	Satellite receiver	7
AUTO PROGRAM	23	Satellite receiver and VCR	7
AUTO VOLUME CONTROL	19	Two VCRs	6
AUX Hookup	3, 4	VCR	5
B		CURRENT TIME SET	20
BALANCE	19	D	
BASIC menu operations 	17	DAYLIGHT SAVING	20
BASS	19	DEMO	12
Battery installation	11	DISPLAY button	
BRIGHTNESS	18	CAPTION VISION	22
C		XDS	22
CABLE	23	DVD operation	29
Cable box	4	E	
operation	30	Editing using MONITOR OUT	6
CAPTION VISION (closed caption)	22	EFFECT	
CH +/-	15	OFF	19
CHANNEL CAPTION	23	SIMULATED	19
CHANNEL FIX	23	SRS	19
		SURROUND	19
34		F	
		FAVORITE CHANNEL	21
		FAVORITE CHANNEL w/preview	21
		FREEZE button	15
		H	
		HUE	18
		I, J, K	
		JUMP button	13
		L	
		LANGUAGE	22
		Language selection	12, 22
		Laserdisc	29
		M	
		Menu selection	16
		MODE	
		MOVIE	18
		STANDARD	18
		VIVID	18
		MONITOR OUT	6
		MTS	
		MONO	19
		SAP	19
		STEREO	19
		MUTING button	13
		O	
		ON/OFF TIMER	20
		Operating video equipment	28

P, Q		S		V, W, X	
PARENTAL CONTROL		SAP	19	VCR	5
PARENTAL LOCK	27	Safety	1	VCR codes	28
RATING	27	Select buttons	11	VCR operation	28
CHANGE PASSWORD	27	Adjustment bars	11	VIDEO LABEL	21
Picture-in-Picture (PIP)		SET UP menu 	21	VIDEO menu operations 	
Main picture	15	CAPTION VISION	22	BRIGHTNESS	18
Window picture	15	CHANNEL SETUP	21	COLOR	18
PICTURE MODE, button	13	FAVORITE CHANNEL	21	HUE	18
PIP connections	15	LANGUAGE	22	MODE	18
PIP operations		PARENTAL CONTROL	21	PICTURE	18
AUDIO	15	TILT CORRECTION	22	SHARPNESS	18
CH+/-	15	VIDEO LABEL	21	VOL +/-	12
FREEZE	15	Setting up TV	12	VTR	28
PIP	15	SHARPNESS	18	XDS	22
POSITION	15	SLEEP button	13		
SWAP	15	SPEAKER			
TV/VIDEO	15	ON	19		
Programming the remote	28, 30	OFF	19		
R		Specifications	32, 33		
RATINGS		SWAP button	15		
ENGLISH	25	SYSTEM OFF button	14		
FRENCH	25	T, U			
MOVIE	24	TILT CORRECTION	22		
TV	24	TIMER menu operations 			
U.S.A.	25	CURRENT TIME SET	20		
UNRATED	24	DAYLIGHT SAVING	20		
Remote control	11, 13	ON/OFF TIMER	20		
FUNCTION buttons	13	TREBLE	19		
Illustration	inside front cover	Troubleshooting	31, 32		
		TV (FUNCTION) button	13		
		TV POWER button	13		
		TV/VIDEO button	14		
		TV OUT	9		